


Connect Vcc and GND to radio's power supply.
 Isolate F/A-key from radio's circuitry and connect to KEY_IN.
 Connect KEY_OUT to radio.

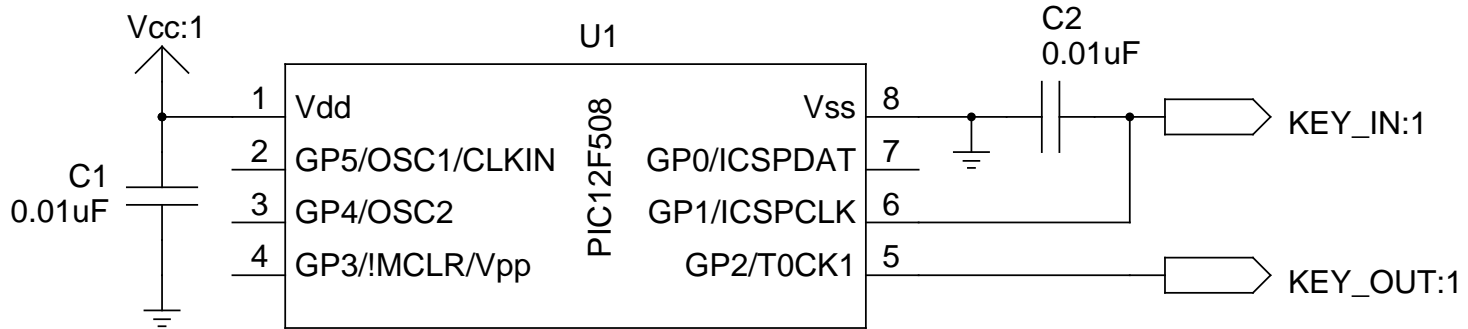

Baofeng UV-3R "F/A"-key modification

TITLE Disables "Alarm" function but not "F" function

FILE: baomod.sch

REVISION: 1.00 / 8.2.2013

PAGE 1 OF 1

DRAWN BY: Antti J. Niskanen OH2GVB